

DVD OPERATION

1. In the patch panel, run a patch cord from the DVD VIDEO OUT jack to the CEIL. PROJ. VIDEO CABLE jack. Refer to the laminated patch panel configuration sheet located in the equipment bay.
2. Run a patch cord from the DVD AUDIO OUT jack to the CLASSROOM PC LINE IN jack. Refer to the laminated patch panel configuration sheet located in the equipment bay.
3. Turn on the classroom computer.
4. Turn on the DVD player.
5. Turn on the Ceiling Projector.
6. On the projector remote control unit, press the VIDEO button.
7. Insert the CD into the DVD player and press PLAY.
8. Adjust the sound level with the volume control located on the left channel speaker.