

RADIO-SKYPIPE SERVER/STAND ALONE MODE

1. Ensure the radios are connected to the appropriate Line In jack at the patch panel in the basement equipment rack. Refer to the Patch Panel Configuration Sheet in the Operating Procedures book or the sheet in the equipment bay for jack locations.
2. Double click the Radio-SkyPipe icon on the desktop.
3. Click Mode/Stand Alone on either computer or Mode/Server (Sonof SOL only)
4. Click Priority and select Above Normal
5. Click Start Chart.
6. Click Hide on FTP Image Save window (SonofSOL only)
7. Minimize SkyPipe FTP Upload window (Sonof SOL only)
8. Click 'Connect'.