

VCR OPERATION

1. To turn on the VCR located in the basement equipment bay, press the TIMER button, then the OPERATE button, and the TIMER button once again.
2. In the patch panel located in the same bay as the VCR, run a patch cord from the VCR VIDEO OUT jack to the CEIL. PROJ. VIDEO CABLE jack. Refer to the laminated patch panel configuration sheet located in the equipment bay.
3. Run a patch cord from the VCR AUDIO OUT (Mono) jack to the CLASSROOM PC LINE IN jack. Refer to the laminated patch panel configuration sheet located in the equipment bay.
4. Turn on the Ceiling Projector.
5. On the projector remote control unit, press the VIDEO button.
6. Turn on the classroom computer.
7. Insert the cassette into the VCR and press PLAY.
8. Adjust the sound level with the volume control located on the left channel speaker.