



MALLINCAM & CELESTRON FOCUS OPERATING PROCEDURE

If you can't obtain Mallincam focus using the focuser hand pad, you will need to reset the electric focuser.

1. Using the focuser hand pad move the electric focuser to 3.5 on the focuser scale.
2. You can also adjust the focuser manually. Disengage the drive gears by turning thumbscrew 'A' counter clockwise, raise gear 'B' manually, and move focus with knob 'C' until 3.5 on the focuser scale is reached. Turn thumbscrew 'A' clockwise until the gears are engaged. Only apply enough pressure to completely engage the gears.

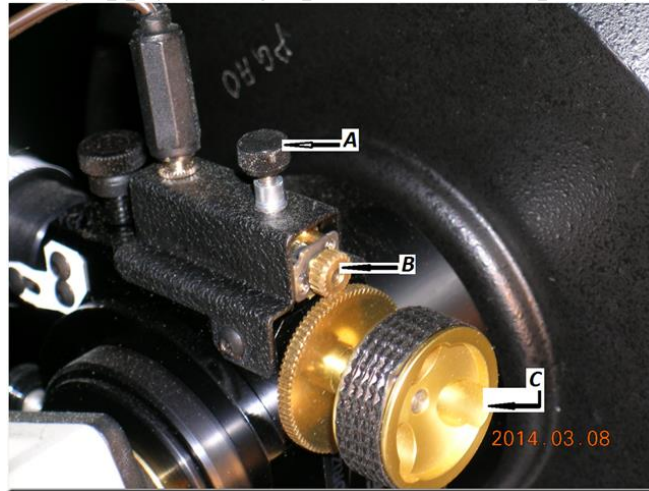

3. Adjust the Celestron telescope focus using the knob located on the telescope visual back until you attain a rough focus.

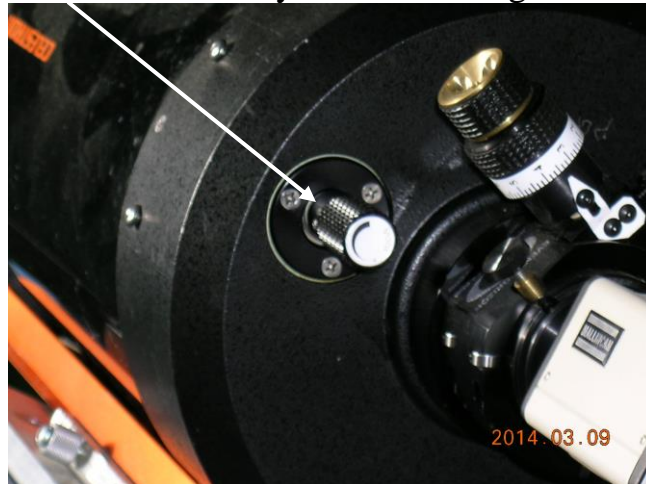

4. Using the focuser hand pad, adjust for best focus.